


2.4. Install Franking Roller (optional)

The optional Franking Roller is an ink stamp which can be used to mark the front of a document to read "ELECTRONICALLY DEPOSITED".

Follow these steps to insert the franking roller into the device.

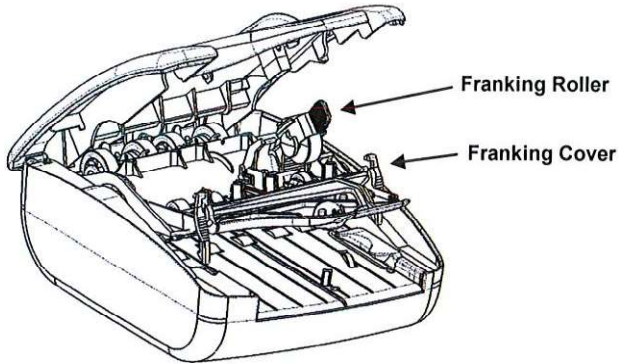

Open the Franking Cover

1.) Open the top cover by pressing the top cover release button and lifting the cover



2.) Open the franking cover by pressing forward on the top cover latches and pulling the franking cover down



Insert the Franking Roller

1.) Insert the Franking Roller straight into the roller harness, aligning the assembly guides on both sides



2.) Align the roller notch to fit into the positioning tab



3.) Apply pressure to the handle until the roller clicks into place

4.) Close the franking cover by pushing it up until it clicks into place

5.) Close the top cover. Press firmly in the middle of the scanner to securely close the top cover.



6.) After replacing franking roller, connect device and perform franking on a test document. Sample franking will ensure the correct position and confirm proper installation of the roller.



CAUTION

- Avoid contact with the main drive roller to prevent ink transfer to documents
- Ink may be harmful if swallowed
- Avoid contact with eyes
- Damage to the unit or the roller resulting from modifying the roller is not the responsibility of Panini