

3. Operating your Panini Vision X


3.1 Document Support Installation

Insert the feeder extension in the slot uncovered by pushing back the document pressure plate. Installation is correct if the feeder extension is at the same level as the beginning of the scanner platform.



3.2 Extension Plate Installation

The feeder extension is designed to support all documents anticipated to be processed by the Vision X. Markets or applications that process a large number of long documents (longer than 8 inches) may find it necessary to apply the optional extension plate for better document support, reducing the risk of image skewing, MICR rejects, etc. Assembly is made by sliding the extension plate, face side up, along the bottom side of the feeder extension into the support notches until the plate snaps into place. The lock tabs should securely fit into the round holes and the short and long tabs should be fully inserted into the support notches.

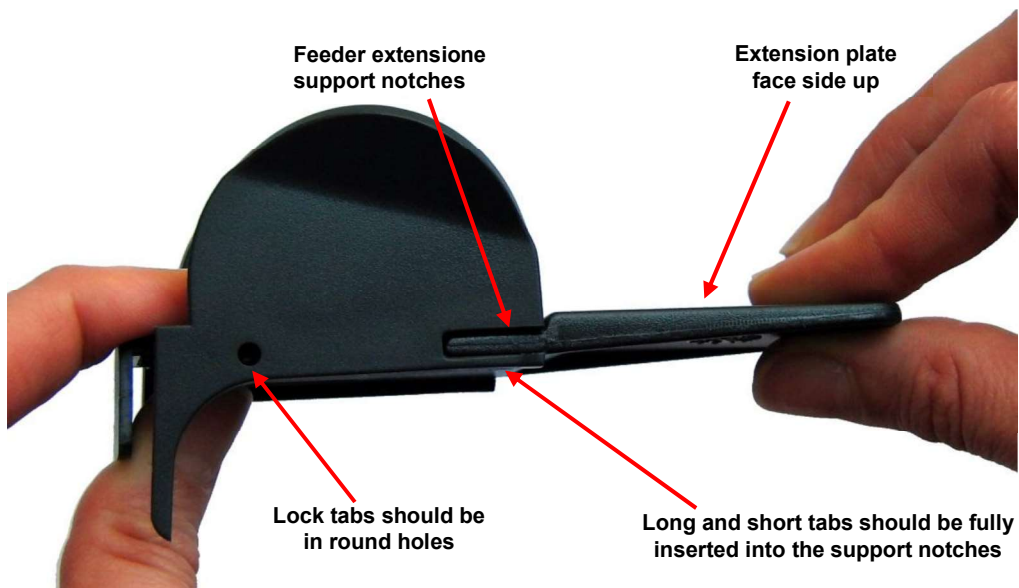

To remove, firmly grip the feeder extension and the extension plate and pull apart.